

QUICK REFERENCE GUIDE

This easy-to-use Quick Reference Guide is intended to provide you with a user-friendly learning experience to quickly acquaint you with your new Infiniti.

- The Quick Reference Guide will help you to more fully appreciate your vehicle's superior features, unique functions and advanced technology.
- Refer to the Quick Reference Guide to learn how to personalize your vehicle's controls and equipment to maximize your driving comfort and convenience.

However, this guide is not intended as a substitute for your vehicle's Owner's Manual. For comprehensive product and vehicle safety information, please refer to your Owner's Manual. It will help you to better understand the operation and proper maintenance of your new Infiniti vehicle.

Both Infiniti and your Infiniti dealer are dedicated to serving all your automotive needs. Your complete satisfaction is our primary concern. It is suggested that you read this Quick Reference Guide and your vehicle's Owner's Manual thoroughly before contacting your Infiniti dealer with related questions.



contents

Page	GETTING STARTED
1	Intelligent Key System
2	Push-Button Ignition
3	Intelligent Key
4	Child Safety Rear Door Locks
4	Opening Fuel-Filler Lid
4	Opening Trunk
5	Vehicle Control Center
6	Infiniti Controller
7	Dash-Mounted Center Display Screen
7	Buttons Surrounding Infiniti Controller
11	Steering Wheel Controls
12	Infiniti Voice Recognition
14	Outside Mirrors Tilt-Down In Reverse
14	HomeLink [®] Universal Transceiver
15	Instrument Panel Layout
16	Front-Passenger Air Bag Status Light
17	Driver's Seat Memory
18	Adaptive Front lighting System (AFS)
18	Rear-Passenger Seat Controls

DRIVING CONTROLS

19	Intelligent Cruise Control (ICC)
20	Snow Mode ON/OFF Switch
21	Lane Departure Warning (LDW)

MEDIA CENTER

Audio System	23
Customize Radio Presets/Tone & Additional Settings	24
Infiniti Mobile Entertainment System (MES)	26
Wireless Remote Control	27
Bluetooth [®] Hands-Free Phone System	28

COMFORT

31	Dual-Zone Climate Control (Heater and Air Conditioner)
32	Defrosting/Defogging Windows

NAVIGATION

Infiniti Navigation System	
Storing Addresses In Address Book	34
Voice Guidance ON/OFF	35
Switching Map Views	35
Where Am I?	35
Store Current Location	35
Programming A Destination	36

CONVENIENCE

INTELLIGENT KEY SYSTEM Refer to section 3 in your Owner's Manual for more information on the Intelligent Key System.

This system allows you to lock and unlock your vehicle, open the trunk, and start and stop the engine without removing the Intelligent Key from your pocket or bag.

Two Intelligent Keys are provided with your Infiniti vehicle. Several vehicle features can be tied to a specific Intelligent Key. The keyfobs attached to your Intelligent Key are color-coded to conveniently distinguish one driver's Intelligent Key from another.

IN-DASH INTELLIGENT KEY PORT

When entering/exiting the vehicle and starting/stopping the engine, the Intelligent Key can be left on "your person" (in a pocket or bag). For your convenience and to start the vehicle if the Intelligent Key battery becomes discharged, you may insert your Intelligent Key into the In-Dash Port.

Push the Intelligent Key completely into the port until you feel it "engage."

Note: If you leave the Intelligent Key in the port when the ignition is switched to LOCK and the driver's door is opened:

- the amber indicator to the right of the port will flash,
- a repetitive beep tone will sound, and

the Intelligent Key Removal indicator will illuminate on the dot matrix display inside the tachometer.

Push in on the Intelligent Key to remove it from the port and take it with you as you exit.

LOCK/UNLOCK OPERATION - DRIVER AND FRONT-PASSENGER DOOR HANDLE REQUEST SWITCHES

- Locking Doors Push any door handle Request Switch once.
- Unlocking Doors - Push any door handle Request Switch once. The corresponding door will unlock. Push the door handle Request Switch again within 5 seconds to unlock all doors.

OUTSIDE BUZZER AND LOCKOUT PROTECTION

A rapid beep tone will sound and the doors will not lock if you attempt to exit the vehicle and lock the doors with either front door handle Request Switch while the Intelligent Key is inside the vehicle.









getting started

PUSH-BUTTON IGNITION SWITCH STARTING/STOPPING THE ENGINE Refer to section 5 in your Owner's Manual.

To start the engine: Push the ignition switch **while depressing the brake**.

To stop the engine: Put the transmission in **PARK** and push the ignition switch. The ignition switch **LOCK** (OFF) mode will illuminate.

Note: You can also start the engine from ACC (Accessory) or ON mode by pushing the ignition switch while depressing the brake.

CHANGING IGNITION SWITCH MODES With the engine stopped and foot off brake.

With the ignition in **LOCK** (OFF) mode, push the ignition switch:

One time to change to ACC (Accessory) mode.

Two times to change to ON mode.

Three times to return to LOCK (OFF) mode.



PUSH CENTER Once to change to ACC, Two times to change to ON, Three times to return to LOCK








INTELLIGENT KEY

Your Intelligent Key will operate up to 30 feet from your vehicle.

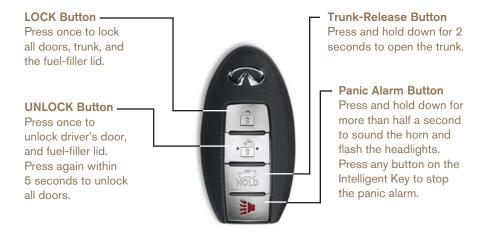

OPENING WINDOWS WITH THE INTELLIGENT KEY

Press and hold down the UNLOCK button for at least 3 seconds, and continue pressing until the windows are completely open. Note: The front windows will open completely, and the rear windows will open 3/4 of the way.

ACTIVATING/DEACTIVATING THE HORN BEEP FEATURE

You can program your Intelligent Key to sound the horn when locking the vehicle.

To activate: Press and hold down the LOCK and UNLOCK buttons together for at least 2 seconds. The hazard indicators flash once and the horn chirps once to confirm the operation is complete.

To deactivate: Again, press and hold down the LOCK and UNLOCK buttons together for at least 2 seconds. The hazard indicators flash three times to confirm the operation is complete.



getting started

CHILD SAFETY REAR DOOR LOCKS

Refer to section 3 in your Owner's Manual.

- The safety lock levers are located on the inside edge of the rear doors.
- When the lever is moved to LOCK position, the door can only be opened from the outside. If you cannot open a rear door from the inside, check the child safety lock lever.



OPENING THE FUEL-FILLER LID

Refer to section 3 in your Owner's Manual.

To open the fuel-filler lid:

- 1 Unlock the doors with the Intelligent Key or power door lock switch.
- 2 Then, push in on the rear edge (9 o'clock position) of the fuel-filler lid to release.

Note: When all of the vehicle doors are locked, if either the driver or front-passenger uses the inside door lock knob to unlock and exit the vehicle, the fuel-filler lid will remain LOCKED and will not open as noted above. YOU MUST use the Intelligent Key or power door lock switch to unlock the fuel-filler lid.



OPENING THE TRUNK

In addition to the Trunk-Release button () on the Intelligent Key, you can open the trunk by doing one of the following:

- Push the Trunk-Release switch on the Instrument Panel (see pages 15 and 16 for exact location).
- With the Intelligent Key on "your person," press the Trunk-Release button located under the Infiniti logo on the trunk face.



VEHICLE CONTROL CENTER

Refer to section 4 in your Owner's Manual.

The following controls and buttons are used together to operate most functions displayed on your vehicle's Dash-Mounted Center Display Screen:

- Infiniti Controller
- Buttons and Controls surrounding the Infiniti Controller



Vehicles with the Infiniti Navigation System


Vehicles without the Infiniti Navigation System



AUDIO CONTROLS - see page 23 CLIMATE CONTROLS - see page 31

In addition, Steering Wheel Controls can be used for many Center Display Screen functions. See STEERING WHEEL CONTROLS later in this section for details.



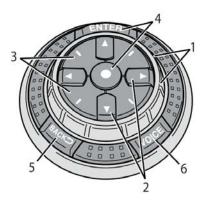

INFINITI CONTROLLER Refer to section 4 in your Owner's Manual.

Buttons located on and around the Infiniti Controller serve various purposes for navigating around the Center Display Screen and choosing options. As you use the vehicle controls, you will find the control combination that best suits your needs.

1 Center Dial

Turn the Center Dial to navigate **up**, **down**, and **across** the display screen, highlight items for additional information, and to make changes to settings.

2 Main Directional Buttons

Four Main Directional Buttons (marked with arrows) on the face of the Infiniti Controller Center Dial can also be used to perform the same functions as the Center Dial, above.

3 Additional Directional Buttons (for vehicles with the Infiniti Navigation System) Four additional buttons, marked with small "dashes" are located between the Main Directional Buttons. When using the Navigation System for instance, these buttons can be used in different ways to make "fine-tuned" movements around the navigation map screen.


4 ENTER Buttons

When you use the Center Dial or Main Directional Buttons to highlight a menu item, the text will display in **yellow**. Press either of the ENTER Buttons to select that highlighted item.

5 BACK Button

Press to return to the previous function shown on the display screen, and to delete characters when using the on-screen keyboard.

6 VOICE Button (for vehicles with the Infiniti Navigation System) Press to hear the next navigation instruction. See the Navigation section of this guide (beginning on page 33) for more detailed Navigation System information.

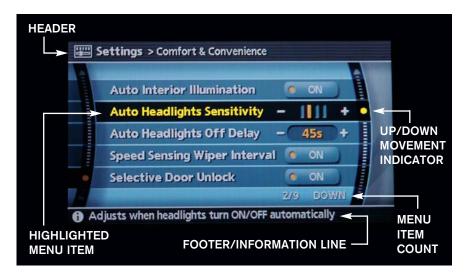

DASH-MOUNTED CENTER DISPLAY SCREEN

Refer to section 4 in your Owner's Manual and the separate 2006 M35/M45 Infiniti Navigation System Owner's Manual for more information.

Vehicle functions are viewed on the Dash-Mounted Center Display Screen in menus. Whenever a menu selection is made or menu item is highlighted, different areas on the screen provide you with important information.

Buttons Surrounding Infiniti Controller

DEST BUTTON (for vehicles with the Infiniti Navigation System) Press to set a destination in the Navigation System. See the Navigation section of this guide (beginning on page 33) for more detailed Navigation System information.

RADIO BUTTON

Press to change radio bands: AM, FM and SAT (if Satellite Radio installed and activated).

MAP BUTTON (for vehicles with the Infiniti Navigation System) Press to display the Map screen.

DISC BUTTON

Press to activate and display audio CD, CDs with MP3/WMA, DVD and AUX functions (if so equipped). Press multiple times to page through functions.

getting started

ROUTE BUTTON (for vehicles with the Infiniti Navigation System) Press to display Route related information and settings. See the Navigation section of this guide (beginning on page 33) for more detailed Navigation System information.

AUDIO TEXT BUTTON (for vehicles without the Infiniti Navigation System) Press this button to display information about the audio (FM/SAT band, CD) currently playing, such as channel name, category, name of the artist, title of the song, and other information, if available.

PHONE BUTTON Press to display functions of the Bluetooth® Hands-Free Phone System.







SETTING BUTTON Press to display the Settings Menu.



STATUS BUTTON -

Displays different views of vehicle systems information on the display screen. For example:

Audio information only.

Note: If you are listening to a Satellite Radio station, when you press the STATUS button you will be able to view information about the music playing, including SAT Channel name/music genre, artist, CD title, and song title.

- Audio and Climate Control information.
- Audio information, Average Fuel Economy, and Distance to Empty.
- Audio and Navigation information (if equipped with the Infiniti Navigation System and if a destination has been set).

ZOOM OUT BUTTON-

(for vehicles **with** the Infiniti Navigation System) Increases the map view, showing more area.

TRIP BUTTON -

(for vehicles **without** the Infiniti Navigation System) Provides Trip Computer information (Elapsed Time, Driving Distance, and Average Speed). STATUS

ZOOM OUT





getting started

ZOOM IN ZOOM IN BUTTON -(for vehicles with the Infiniti Navigation System) Decreases the map view, showing greater detail. FUEL ECON FUEL ECONOMY BUTTON -(for vehicles without the Infiniti Navigation System) Provides Fuel-related information (Distance to Empty, Average Fuel Economy, and Average Fuel Consumption History in graph form). DAY/NIGHT/OFF/BRIGHTNESS BUTTON · */) OFF (for vehicles **with** the Infiniti Navigation System) When pressed once, adjusts the screen brightness UP or DOWN (using the Center Dial or Main Directional Buttons). When pressed twice, switches the display screen between day view and night view. Press and HOLD to turn the display OFF entirely. Press and HOLD again to resume display. **INCREASE BRIGHTNESS BUTTON -**(for vehicles without the Infiniti Navigation System) Increases the display screen brightness. DAY/NIGHT/OFF DISPLAY BUTTON -. /) OFF (for vehicles without the Infiniti Navigation System) Switches the display screen between day view and night view.


DECREASE BRIGHTNESS BUTTON (for vehicles **without** the Infiniti Navigation System) Decreases the display screen brightness.

Press and HOLD to turn the display OFF entirely. Press and HOLD again to resume display.







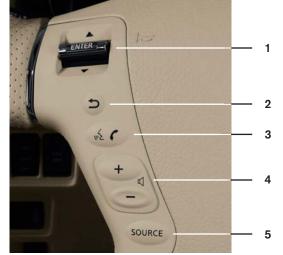

STEERING WHEEL CONTROLS Refer to section 4 in your Owner's Manual.

1 Screen Navigation and Enter Switch

Use to navigate **up**, **down**, and **across** the display screen. When the desired item is highlighted on the screen, push ENTER to select it.

For Radio:

- Push the switch UP or DOWN for less than 1.5 seconds to page through the radio preset stations on the preset bank (A, B, or C) currently selected.
- Push the switch UP or DOWN for more than 1.5 seconds to seek the next or previous radio station on the band (AM, FM, or SAT, if Satellite Radio installed and activated) currently selected.

For CD:

- Push the switch DOWN for less than 1.5 seconds to skip to the next track.
- Push the switch UP for less than 1.5 seconds to return to the beginning of the current track.
- Push the switch several times to skip backward or forward through multiple tracks.
- Push the switch UP or DOWN for more than 1.5 seconds to change to the previous/next CD or MP3/WMA folder.

2 Back Button

Press to return to the previous function shown on the display screen, and to delete characters when using the on-screen keyboard.

3 Push-To-Talk (PTT)/Phone Button

- Press to activate Voice Recognition function.
- If a Bluetooth[®]-enabled cellular phone has been paired to the vehicle and is selected, press this button to answer, initiate (via Voice Recognition) and end phone calls.

4 Volume Control Buttons

5 Source Button

Press to change between radio preset banks A, B, and C, CD, and DVD functions.



getting started

 
CRUISE CONTROL SWITCHES or INTELLIGENT CRUISE CONTROL (ICC) SWITCHES (if so equipped) See the DRIVING CONTROLS section for details about the function of these switches.

INFINITI VOICE RECOGNITION

Infiniti Voice Recognition identifies the natural inflections of your voice and allows convenient, hands-free operation of many vehicle features.

VOICE RECOGNITION COMMAND LISTS/HELP SCREENS

You can view a group of "Command Lists" on the display screen. This is helpful when using Voice Recognition commands with Phone, Navigation, Vehicle Information, Audio/Visual, and Climate Control Voice Systems.



- Press the w2 C button on the steering wheel.
 Voice Recognition will respond "Please say command."
- 2 Wait for the tone and say "Command List."
- 3 Say the name of a Command List displayed.

Note: Once you have chosen one of the Command Lists, you can use the Steering Wheel Screen Navigation and Enter Switch to page through that Command List.

For compete Infiniti Voice Recognition operational instructions and a detailed list of voice commands for specific vehicle systems, refer to section 4, **"Infiniti Voice Recognition System"** in your Owner's Manual, and your separate 2006 M35/M45 Infiniti Navigation System Owner's Manual.

TO OPERATE VOICE RECOGNITION:

- 1 The vehicle ignition switch must be **ON**.
- 2 Press the 🔬 🌈 button on the steering wheel. Voice Recognition will respond "Please say command."
- 3 After you hear the tone, say the appropriate command.
 - When your command is accepted, audible responses will be heard and messages shown on the display screen.
 - If the command is not recognized, Voice Recognition will respond "Please say command." Repeat the command in a clear voice.
 - To cancel the command, press the 🔬 🌈 or 🗯 button once. Voice Recognition will respond "Voice cancelled."
 - To increase or decrease the volume of Voice Recognition response, press the Volume Control (+ or -) buttons on the steering wheel or turn the Audio Volume Control Knob while Voice Recognition is responding. The volume can also be adjusted in the Settings "Volume and Beeps" Menu.

SYSTEM OPERATION TIPS:

- Close all windows. Surrounding noises may interfere with system operation.
- Operate the system when vehicle interior is relatively quiet.
- After pressing the 🔬 🌈 button, wait for the tone before speaking.
- Speak in a clear and natural voice without pausing between words.

VERBAL COMMAND TIPS:

1 For the Infiniti Navigation System, Voice Recognition is programmed with exact street name information. For example, if the street name is Main Street South, when you're prompted "Please say the street name," you must say "Main Street South," not "Main Street."

If there is a possibility that a street has several different names based on location (i.e. Main Street South, Main Street North West, East Main Street, etc.), you should use the manual street address entry and program in the street name "Main Street" to see the available street name choices for "Main Street." See **Storing Your Home (and Other Addresses) in Your Address Book** on page 34.

- 2 When using Voice Recognition to program a destination in the Navigation System, for 0 - say "zero" not "oh."
- 3 For some voice controlled functions, compound numbers (two or more digits together) may be spoken. For example, to seek FM station 98.1, you may say "Tune ninety-eight point one FM."

When saying street addresses and phone numbers, however, saying compound numbers may result in a destination seek or phone dial error.

- For best Voice Recognition street address results, say street addresses as single digits. For example, say 20360 as "two, zero, three, six, zero" NOT "twenty, three sixty."
- For best Voice Recognition phone dialing results, say phone numbers as single digits. For example, when dialing 1-800-123-2222, say "Dial one, eight, zero, zero, one, two, three, two, two, two, two."
- 4 If Voice Recognition is having difficulty accepting a state, city, or street name, try speaking the name phonetically. For example, for "Oregon" say "Ore Egg On."

getting started

OUTSIDE MIRRORS -AUTO TILT-DOWN IN REVERSE Refer to section 3 in your Owner's Manual.

Push the Outside Mirror switch to the **LEFT** or **RIGHT** to turn the tilt-down feature ON for the corresponding mirror. When the transmission is placed in **REVERSE** the **selected mirror** will automatically tilt **in** and **downward** to provide a better view of the curb or road when backing the vehicle.

To turn this feature OFF: Push the Outside Mirror switch to the **center/neutral** position.





AUTOMATIC ANTI-GLARE INSIDE REAR VIEW MIRROR (with ELECTRONIC COMPASS) (if so equipped) Refer to sections 2 and 3 in your Owner's Manual.

HOMELINK[®] UNIVERSAL TRANSCEIVER

(if so equipped) Refer to the program card located in the owner's literature portfolio and section 2 in your Owner's Manual for operation of these buttons.



INSTRUMENT PANEL LAYOUT

Refer to section 2 in your Owner's Manual.

- 1 Headlight, Fog Light and Turn Signal Switch
- 2 Steering Wheel Controls
- 3 Cruise Control Switches See section 5 in your Owner's Manual for details.
- 4 Intelligent Cruise Control (ICC) Switches if so equipped
- 5 Windshield Wiper and Washer Switch
- 6 Instrument Panel Brightness Control
- 7 Power Adjustable Outside Mirror Switches
- 8 Adaptive Front lighting System (AFS) ON/OFF Switch
- 9 Vehicle Dynamic Control (VDC) OFF Button See sections 2 and 5 in your Owner's Manual for details.
- 10 Steering Wheel Power Tilt & Telescopic Control
- 11 Trunk-Release Switch
- 12 In-Dash Intelligent Key Port
- 13 Lane Departure Warning (LDW) Button
- 14 Hood-Release Lever
- 15 Hazard Warning Light Button
- 16 Automatic Transmission Control Lever Manual Shift Mode
- 17 Climate Controlled (Heated/Cooled) Front Seat Switches if so equipped
- 18 SNOW Mode ON/OFF Switch if so equipped
- 19 Power Rear Sunshade Switch if so equipped
- 20 REAR ON/CONT CANCEL (Driver-Selectable Rear Control Lockout) Switch

getting started

- 6 Instrument Panel Brightness Control
- 7 Power Adjustable Outside Mirror Switches
- 8 AFS ON/OFF Switch
- 9 VDC OFF Button



- 10 Steering Wheel Power Tilt & Telescopic Control
- 11 Trunk-Release Switch
- 12 In-Dash Intelligent Key Port
- 13 LDW Button
- 14 Hood-Release Lever



FRONT-PASSENGER AIR BAG STATUS LIGHT Refer to section 1 in your Owner's Manual for detailed information regarding the Infiniti Advanced Air Bag System.

This vehicle is equipped with the Infiniti Advanced Air Bag System. The front-passenger air bag is designed to automatically turn off under certain conditions. If the front-passenger air bag is off, the front-passenger air bag status light will illuminate. The light will also illuminate any time the front-passenger seat is not occupied.





DRIVER'S SEAT MEMORY (Automatic Drive Positioner)

Refer to section 3 in your Owner's Manual for complete instructions on operation and functions of the Driver's Seat Memory system.



- Move the driver's seat BACK and the steering wheel UP to ease entering and exiting the vehicle.
- Adjust the driver's seat, steering column and outside mirrors to two separate memorized positions.

You can turn any of these functions ON or OFF:

 With the ignition switch in ON mode, press the SETTING button.



- 2 Highlight Comfort & Convenience, then press ENTER.
- 3 Highlight Lift Steering Wheel On Exit, then press ENTER to change between ON and OFF.
- 4 Highlight Slide Driver's Seat Back On Exit, then press ENTER to change between ON and OFF.

TO SET CUSTOMIZED SEAT, STEERING, AND MIRROR POSITION MEMORY:

- 1 Push the ignition switch to ON mode. Keep the transmission in PARK.
- 2 Adjust seat, steering wheel, and outside mirrors to the desired positions.
- **3** Press the **SET** button. The indicator lights on both Memory button 1 and 2 will illuminate.
- 4 Within 5 seconds, press Memory button 1 or 2 and hold for at least 1 second.

Note: The indicator light on the Memory button you select will blink ON and OFF one time and then illuminate solid amber for approximately 5 seconds. Seat/steering/mirror memory is now set to your preference.

5 Link the seat/steering/mirror memory to your Intelligent Key.

While the indicator light on the Memory button is illuminated (see the "Note" in step 4, above) press the **UNLOCK** button on your Intelligent Key. The indicator light on the Memory button chosen will blink ON and OFF approximately 10 times. The memory positions are now matched to the Intelligent Key. You may set the second seat/steering/mirror memory positions to your other Intelligent Key by repeating the steps above.

Note: Always perform step 5 when setting seat/steering/mirror memory. If you DO NOT link seat/steering/mirror memory to your Intelligent Key, whenever you unlock the vehicle with your Intelligent Key, the seat will move to the last position set.

getting started

ADAPTIVE FRONT LIGHTING SYSTEM (AFS) ON/OFF SWITCH

AFS

OFF

(if so equipped) Refer to section 2 in your Owner's Manual.

As you turn left or right, or drive along winding roads, the Adaptive Front lighting System (AFS) moves your lowbeams left and right, according to your vehicle's steering pattern and speed. The lowbeams swivel to increase visibility ahead of you and on the sides of the road.

To turn **AFS OFF**: Press the bottom of the switch.

The **AFS OFF** indicator next to the Fuel Gauge will illuminate when AFS is **OFF**.

AFS will remain **OFF** until you push the switch back **UP** to the **ON** position.

Note: When the vehicle is stopped or traveling at an extremely slow speed, the headlights **WILL NOT SWIVEL** when you turn the steering wheel to the left.





REAR-PASSENGER SEAT CONTROLS (if so equipped) Refer to section 4 in your Owner's Manual.



INTELLIGENT CRUISE CONTROL (ICC)

(if so equipped) Refer to section 5 in your Owner's Manual for complete instructions on operation and functions of the ICC.

Steering wheel mounted ICC controls:

- 1 ACCEL/RES COAST/SET Switch
- 2 CANCEL Button
- 3 Following Distance Button
- 4 CRUISE ON/OFF Button



CRUISE

11-0

.....

CRUISE

The ICC system can be set to one of two cruise modes:

- Vehicle-to-vehicle distance-control cruise
- Conventional fixed-speed cruise control

Setting vehicle-to-vehicle distance-control cruise1Press the CRUISE ON/OFF button for less than

- 2 Accelerate to the desired speed.
- 3 Push DOWN on the COAST/SET switch and release it. Cruise Control should be set to the desired speed.

When a vehicle **IS NOT** detected ahead of you in the lane, the **set distance**, and **set vehicle speed** indicator lights will illuminate in **SET** mode.

When a vehicle **IS** detected ahead of you in the lane, the **vehicle ahead detection, set distance**, and **set vehicle speed** indicator lights will illuminate in **SET** mode.

Setting conventional fixed-speed cruise control

- Press the CRUISE ON/OFF button and hold for more than 1.5 seconds. The CRUISE indicator light will illuminate.
- 2 Accelerate to the desired speed.
- 3 Push DOWN on the COAST/SET switch and release it. The CRUISE SET indicator light will illuminate. Cruise Control should be set to the desired speed.

Note: There are certain conditions under which vehicle-to-vehicle distance-control and/or fixed-speed cruise control cannot be set or will automatically cancel. Three such conditions are shown below.

- When rain, snow, or dirt cover the system sensor (located in front bumper opening).
- When the windshield wiper is operated at low or high speed.
- When strong light shines directly on the front of the vehicle (i.e. sunrise or sunset).

Refer to section 5 in your Owner's Manual for full lists of these conditions.

Switching between the two cruise control modes:

When one of the two cruise control modes is in use, you must first turn the system **OFF**, and then **ON** again (as instructed above) to select the other cruise control mode.

driving controls



ATTESA E-TS[™] AWD (ALL-WHEEL DRIVE) WITH DRIVER SELECTABLE "SNOW MODE" ON/OFF SWITCH (if so equipped) Refer to sections 2 and 5 in your Owner's Manual.

The AWD system enhances all-weather performance by supplying driving power to the front wheels (in addition to the rear wheels) in various traction conditions.

 Snow Mode ON - Push the SNOW switch ON for slick conditions. By reducing throttle sensitivity, driveability is enhanced.

Note: The indicator light on the switch will illuminate when SNOW Mode is turned **ON**.



 Snow Mode OFF - Push the switch to OFF for automatic AWD operation.







LANE DEPARTURE WARNING (LDW) BUTTON (if so equipped) Refer to sections 2 and 5 in your Owner's Manual.

When **ON**, the Lane Departure Warning (LDW) system generates visual and audible warnings indicating when your vehicle is about to unintentionally move out of its travel lane where lane markers are detectable.



LDW operates in one of two modes:

- AUTOMATIC MODE, or
- MANUAL (OFF) MODE

AUTOMATIC MODE

LDW is automatically **ON** whenever you start the vehicle. It then activates at vehicle speeds over 45 mph.



driving controls

To turn LDW from ON to OFF for one drive ONLY With the LDW button indicator light illuminated ON:



LDW ON - Press the LDW button again. The indicator light on the button will illuminate when the system is turned ON.

MANUAL (OFF) MODE

For your convenience, you may choose to manually override the LDW system so that it doesn't turn **ON** when you start the vehicle. In this Mode, there will be **no** visible or audible warnings when your vehicle is about to move out of its travel lane.

To change from LDW AUTOMATIC MODE to MANUAL (OFF) MODE:

- Push the ignition switch from LOCK (OFF) to ON mode.*
- Verify the LDW button indicator light is still illuminated after the 5 second self-check.
- Press the LDW button one time to turn the LDW switch indicator light OFF.
- Press and hold the LDW button down for approximately 5 seconds until you hear five beeps. The LDW button indicator light should now go out.

To change from LDW MANUAL (OFF) MODE to AUTOMATIC MODE:


- Push the ignition switch from LOCK (OFF) to ON mode.*
- Verify the LDW indicator light is not illuminated after the 5 second self-check.
- Press and hold the LDW button down for approximately 5 seconds until you hear five beeps. The LDW system should now be changed to AUTOMATIC mode.

*No matter whether LDW is in MANUAL (OFF) or AUTOMATIC modes, when the ignition switch is changed to ON mode, a LDW button indicator light self-check occurs, with the LDW button indicator illuminated for 5 seconds.

To verify whether the LDW system is in AUTOMATIC or MANUAL (OFF) mode, push the ignition switch to change to **LOCK** (OFF) mode. Then push the ignition switch to change back to **ON** mode.

After the initial LDW button indicator light self-check, if the system is:

- In AUTOMATIC mode, the LDW indicator light **will** be illuminated.
- In MANUAL (OFF) mode, the LDW indicator light will not be illuminated.

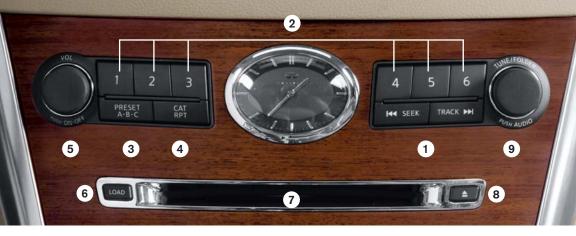

AUDIO SYSTEM

BOSE® FM-AM RADIO WITH IN-DASH 6-DISC CD AUTOCHANGER Refer to section 4 in your Owner's Manual for complete instructions on Audio System operation and functions.

RADIO Button - Activates and displays radio functions. Press to switch between AM, FM and SAT bands.



Note: No satellite radio reception is available and "NO SAT" is displayed when the SAT band option is selected unless optional satellite receiver and antenna are installed, and an XM[®] or SIRIUS™ satellite radio service subscription is active.

DISC Button - Activates and displays audio CD, CD-ROMs with MP3/WMA, DVD, and AUX functions. Press multiple times to page through functions.



1 SEEK & TRACK Buttons

Press and release -AM/FM/SAT mode: Seeks stations, stopping at the previous/next broadcasting station. CD mode: Selects previous/next selection on the CD currently playing.

Press and hold -AM/FM/SAT mode: Scans stations, stopping at the previous/next broadcasting station for 5 seconds. CD mode: Skips forward and back through the track currently playing.

- 2 STATION PRESET/DISC SELECT Buttons (1-6) AM/FM/SAT mode: Use to select preset radio stations. CD mode: Use to select which CD to play.
- **3 PRESET A-B-C Button -** Press to change between radio preset banks A, B, and C. Use to select your customized preset radio stations.

media center

4 CAT (Category)/RPT (Repeat) Button

FM/SAT mode: Press to search for categories (example NEWS, ROCK, TOP 40). CD mode: Press to change the play pattern of a CD or CDs. CDs and CD tracks can be set to repeat play and to play in random order (mix).

5 POWER/VOLUME Knob

- Press to turn audio system ON/OFF.
- Turn to adjust volume level.
- 6 CD LOAD Button Press to load CDs.
- 7 CD Insert Slot
- 8 CD Eject Button
 - Press the button for **less than 1.5 seconds** to eject the CD currently selected.
 - Press the button for more than 1.5 seconds to eject all CDs stored in the CD Changer.

9 TUNE/FOLDER Knob

- Turn to change radio stations.
- Turn to select different MP3/WMA folders if CD-ROM is in the CD Changer.
- Press to adjust BASS, TREBLE, BALANCE, and FADE.

HOW TO CUSTOMIZE YOUR RADIO PRESETS

With the PRESET A-B-C button, you can program up to 18 radio stations (AM, FM, and SAT) into 3 separate preset memory banks - 6 stations for each PRESET bank.

- Press the PRESET A-B-C button to select bank A, B, or C.
 Press the RADIO button to select the AM, FM, or SAT band.
 RADIO
- 3 Tune to the desired station using the SEEK/TRACK buttons or the TUNE/FOLDER knob.
- 4 Press and hold the desired **Station Preset/Disc Select** button (1 through 6) until you hear a "beep" sound.
- 5 Repeat the above steps to program up to 18 stations.

Note: AM, FM, and SAT can be mixed within any of the A, B, or C preset banks.

HOW TO CUSTOMIZE YOUR TONE SETTINGS

Bass, Treble, Balance, and Fade

- 1 Press the TUNE/FOLDER knob until the desired mode appears on the display screen.
- 2 Turn the knob to adjust the setting.





HOW TO CUSTOMIZE ADDITIONAL AUDIO SETTINGS

BOSE[®] Centerpoint[®], BOSE[®] AudioPilot[®], Precision Phased Audio, Speed Sensitive Volume, and Surround Volume (if so equipped)

1 Press the SETTING button. -

- SETTING
- 2 Highlight **Audio**, then press the ENTER button.
- **3** Scroll through the list of audio functions. When the desired selection is highlighted on the display screen, press ENTER to make adjustments.

BOSE[®] STUDIO SURROUND[™] AND CENTERPOINT[®]

(if so equipped)

The sound produced through the seat-mounted speakers in vehicles equipped with the BOSE[®] Studio Surround[™] system will vary according to which audio source is selected.

Likewise, the changes to the sound field produced by the Centerpoint[®] feature will vary according to which audio source is selected.

Note: In AM/FM modes, $\mathsf{Centerpoint}^{\texttt{R}}$ is inactive and seat speaker sound is minimal

CAT (CATEGORY)

Use to search for Radio Data Service (RDS) broadcasting stations in specific categories such as NEWS, ROCK, TOP 40, etc. Available for FM and SAT radio.

To Search for a Category:

- Press the CAT/RPT button to display the different categories.
- Select a category, then press the SEEK or TRACK button within 10 seconds. The radio will tune to the next available station in that category.



media center

INFINITI MOBILE ENTERTAINMENT SYSTEM (MES)

(if so equipped) Refer to section 4 in your Owner's Manual for complete instructions on operation and functions of the Mobile Entertainment System.

- With a motorized flip-down LCD display screen, two wireless headphones, a wireless remote control, and auxiliary input jacks, this system allows rear-passengers to watch movies and play video games while on the road.
- Movies may also be viewed on the Dash-Mounted Center Display Screen while the vehicle is stopped.
- The auxiliary input jacks may be used with compatible devices such as video game systems, portable digital players, camcorders and other portable video players.

Using the system:

The DVD player is located within the Center Console. Insert a disc with the label-side facing the front-passenger's seat.










- To open the display screen, press the Display Screen Open/Close button on the remote control.
- To view movies on the Dash-Mounted Center Display Screen, the vehicle must be stationary with the parking brake applied, and the ignition switch in ACC or ON mode. Press the DISC button on the Infiniti Controller Panel to display the movie.
- Along with DVD and AUX functions, the remote control can be used to adjust navigation, radio, CD, and vehicle settings. To temporarily deactivate any buttons other than those used for DVD and AUX functions, press the headphones button. In this mode, DVD and AUX audio will play exclusively through the headphones. Other audio can be played through the vehicle speakers at the same time.



WIRELESS REMOTE CONTROL

Refer to section 4 in your Owner's Manual. Note: Remote shown in photo is available in late Spring, 2005. Earlier version Remote buttons (though somewhat different visually) function the same.

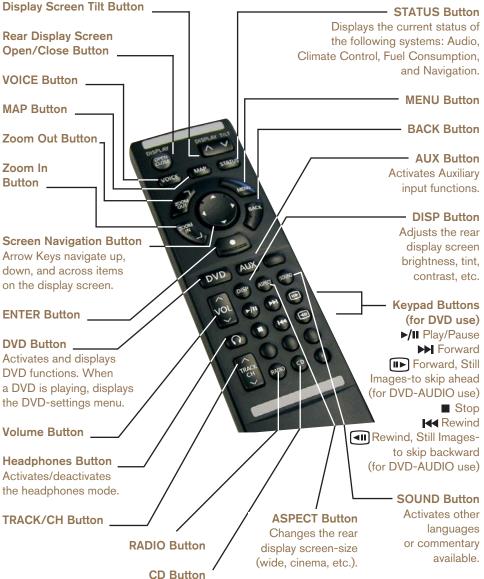

media center

BLUETOOTH® HANDS-FREE PHONE SYSTEM

Refer to section 4 in your Owner's Manual and www.Infiniti.com/bluetooth for more information.

With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth[®] Hands-Free Phone System utilizes Bluetooth[®] wireless technology and voice recognition to provide hands-free cellular phone communication.



(Example only)


Pairing Your Phone

Before you can use the hands-free feature, you will need to set-up or pair the system to recognize your cellular phone(s). Up to 5 Bluetooth[®]-enabled phones can be paired to this system. After the initial one-time set-up, the system will automatically connect upon vehicle start-up as long your phone is in range and available.

The pairing procedure for cellular phones varies according to each manufacturer. For detailed pairing instructions specific to your phone, please visit **www.Infiniti.com/bluetooth.**

Switching to a Different Paired Phone

- 1 Press the **SETTING** button.
- 2 Highlight Phone, then press ENTER.
- 3 Highlight **Bluetooth Setup**, then press ENTER.
- 4 Highlight **Paired Phone List**, then press ENTER.
- 5 Highlight the desired phone, then press ENTER.

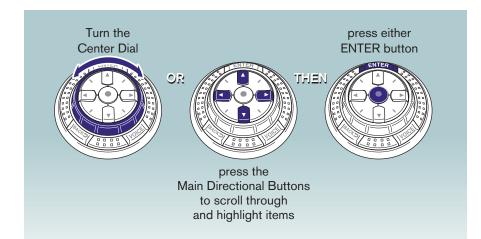



SETTING

Setting Up Your Phonebook

Up to 40 phone numbers can be stored in the phonebook.

- 1 Press the SETTING button. -
- 2 Highlight Phone, then press ENTER.
- 3 Highlight **Phonebook**, then press ENTER.
- 4 Highlight None (Add New), then press ENTER.
- 5 Choose one of the following options on the display screen:

Keypad:Manually input names/numbers.Outgoing calls:Choose names/numbers from a list of calls you've made.Incoming calls:Choose names/numbers from a list of calls you've received.Bluetooth:Activate the Bluetooth® connection. Depending on your
cellular phone, you may be able to transfer a contact directly
from your phone's phonebook to the in-vehicle phonebook
via Bluetooth®. This procedure varies according to each
manufacturer. Please refer to your cellular phone Owner's
Manual for details.

- 6 When the "Add a voicetag?" screen appears, highlight YES and press ENTER to add a voicetag (voice-activated speed dial command used with Infiniti Voice Recognition). Voice Recognition will respond "Please say the name after the tone."
- 7 After the tone, clearly say the name of the contact.

Refer to section 4 in your Owner's Manual for information about adding a voicetag to an existing contact in your phonebook.



media center

Making a Phone Call

1 Press the w2 C button on the steering wheel. Voice Recognition will respond "Please say command."

2 After the tone, do one of the following:

- If a voicetag has been applied to the contact you wish to call, say "Call [contact's voicetag]." For example, say "Call Mike's work."
- If you know the phone number you wish to dial, say "Call [phone number digits]." For example, say "Call 123 456 7891."

OR

- 1 Press and hold the w2 C button on the steering wheel for 1.5 seconds.
- 2 Choose one of the following options on the display screen:

Redial:	Dials the previous number called.
Phonebook:	Select from the list of contacts* in your phonebook.
Call Logs: Dial Keypad**:	Select from a list of incoming/outgoing calls. Allows you to manually dial a phone number.

* The first 15 contacts in your phonebook will be available for you to access while the vehicle is in motion.

**This feature is not available while the vehicle is in motion.

Receiving a Phone Call

When you receive a phone call, the **Phone Menu** screen will display and a ringing tone will sound through your audio system.

- To accept the call, press the x f button on the steering wheel.
- To reject the call, highlight Hang Up on the display screen, then press ENTER.

Refer to section 4 in your Owner's Manual for additional methods you can use to accept a phone call.

Ending a Phone Call

To "hang up" your phone at the end of a call or to disconnect during call placement:

Press and hold the 🗱 🕻 button on the steering wheel for 1.5 seconds. Refer to section 4 in your Owner's Manual for additional methods you can use to end a phone call.

For more information on the Bluetooth[®] Hands-Free Phone System, refer to section 4 in your Owner's Manual.



DUAL-ZONE CLIMATE CONTROL

Refer to section 4 in your Owner's Manual for complete Heater and Air Conditioner operation instructions.

- 1 Display Screen Displays various functions of the Dual-Zone Climate Control system.
- 2 MODE (Manual air flow control) Button Selects air flow location. Note: When in Dual Mode, this button adjusts the air flow location for driver-side ONLY.
- 3 TEMP Switch Raises or lowers the temperature in the vehicle. Note: When in Dual Mode, this button raises and lowers the temperature for the driver-side ONLY.
- 4 **AUTO Button -** Press to select automatic cooling/heating mode.
- 5 **OFF Button -** Turns off the Dual-Zone Climate Control system.
- 6 Front Window Defroster Button
- 7 Rear Window Defroster Button
- 8 AUTO UPPER VENT Button Redirects airflow to reduce force against the driver's and front-passenger's upper body.
- 9 Fresh Air/Air Recirculation Switch Push once to select outside air. Push again to select inside air for maximum cooling performance. Note: Use of the Air Recirculation switch may cause the inside of the windows to fog up.
- 10 A/C (Air Conditioner) Button Turns A/C (cooling function) ON/OFF.
- 11 DUAL (Dual Mode) Button Allows the driver and front-passenger to control their own climate settings.
- 12 Fan Speed Control Buttons
- **13 Passenger TEMP Switch -** When in Dual Mode, this switch raises or lowers the temperature for the front-passenger side.
- 14 Passenger MODE (Manual Air Flow Control) Button When in Dual Mode, this button adjusts the air flow location for the front-passenger side.

comfort

DEFROSTING / DEFOGGING WINDOWS AND FRONT SIDE WINDOWS

Refer to section 4 in your Owner's Manual for complete instructions on Defrosting/Defogging operation.

 Press the Front Window Defroster button to turn it ON. — The indicator light on the button will illuminate.

¥	FRONT	

Note: When you press this button, you may hear a click noise from the engine area. This is normal. The Air Conditioner compressor is being activated. The A/C ON pulls moisture from the air, helping to defrost the inside windows more quickly.

- 2 Press the UP Fan Speed Control button to set the fan speed to maximum.
- **3** Push the **TEMP** (driver-side) switch UP or DOWN desired temperature.



4 Press AUTO, or other desired mode, when defrosting/defogging is complete.

DEFROSTING/DEFOGGING REAR WINDOW AND OUTSIDE MIRRORS Refer to section 2 in your Owner's Manual.

 Press the Rear Window Defroster button to turn it ON. – The indicator light on the button will illuminate.



Press the button again to turn the defroster OFF.
 Or, after approximately 15 minutes, the defroster will turn off automatically.





INFINITI NAVIGATION SYSTEM

(if so equipped)

For complete instructions on the operation and functions of your Infiniti Navigation System, refer to section 4 of your Owner's Manual and the separate 2006 M35/M45 Infiniti Navigation System Owner's Manual.

Various Infiniti Voice Recognition commands are applicable to your Navigation System. Some of the most frequently used are provided later in this section. See section 4 in your Owner's Manual and your separate 2006 M35/M45 Infiniti Navigation System Owner's Manual for complete lists of these commands.

Note: The DVD ROM Drive is located in the vehicle's glove box, AND IS FOR INSTALLATION OF THE DVD NAVIGATION MAPPING DISC <u>ONLY</u>. Entertainment DVDs or CDs should not be inserted into this drive.

Your Mapping DVD should already be installed. Should you wish to upgrade or change your Mapping DVD, contact your Infiniti dealer for assistance.

- 1 **Display Screen -** Displays navigation menus and map.
- 2 **ZOOM OUT Button -** Increases the map view, showing more area.
- 3 ZOOM IN Button Decreases the map view, showing greater detail.
- 4 DEST (Destination) Button Displays Address Book and four alternative ways to program a destination (Street Address, Previous Destinations, Points of Interest, and Others).
- 5 MAP Button Displays the navigation map.
- 6 ROUTE Button Displays route guidance control functions.
- 7 ENTER Buttons Use to select items highlighted on the display screen.

navigation

- 8 Center Dial Turn the dial to navigate up, down, and across the display screen.
- 9 Main Directional Buttons Press to navigate up, down, and across the display screen.
- 10 Additional Directional Buttons Depending on which map is displayed (Plan View or Birdview[™]), use these buttons to make "fine tuned" movements around the display screen.
- 11 BACK (Previous) Button Press to return to the previous function shown on the display screen, and to delete characters when using the on-screen keyboard.
- 12 VOICE Button Press to hear the next navigation instruction.
- 13 SETTING Button Use to set navigation preferences.
- 14 DAY/NIGHT/OFF/BRIGHTNESS Button Use to switch the display screen between day view and night view. Or within approximately 5 seconds of pressing, you can adjust the display screen brightness UP or DOWN. Press and HOLD to turn the display screen OFF entirely. Press and HOLD again to resume screen display.

Storing Your Home (and Other Addresses) in Your Address Book

- 1 Press the SETTING button. -
- 2 Highlight Navigation, then press ENTER.
- 3 Highlight Address Book, then press ENTER.
- 4 Highlight **Stored Location**, then press ENTER.
- 5 Highlight Home Location (Add New), then press ENTER.
- 6 Highlight **Street Address**, then press ENTER.
- 7 Input the House Number by highlighting each character and pressing ENTER.
- 8 Once complete, highlight **OK** and press ENTER.
- Input the Street Name by highlighting each character and pressing ENTER.To insert a space, highlight and press ENTER.
- 10 Once complete, highlight **OK** and press ENTER.
- 11 Highlight the correct street and city from the list, then press ENTER.
- 12 Press ENTER again. "Home Location Stored" will appear on screen, and you will have the option to Edit or Alter Location at this time.
- 13 Press the MAP button to return to the Map screen.

Note: You can store other addresses by repeating the steps above. In step 5, highlight **None (Add New)**, then press ENTER.





SETTING

Turning Voice Guidance ON/OFF

- 1 Press the SETTING button. -
- 2 Highlight Navigation, then press ENTER.
- 3 Highlight **Guidance Settings**, then press ENTER.
- 4 Highlight Guidance Voice.
- 5 Press ENTER to choose **ON** or **OFF.** The indicator light will illuminate ON when Voice Guidance is ON.

Voice Command:

- 1 Press the 🖏 🕻 button on the steering wheel. Voice Recognition will respond "Please say command."
- 2 After the tone, say "Voice Guide On" or "Voice Guide Off."

Switching Map Views

You can switch between two Navigation Map views: Plan View and Birdview[™]. In addition, you have the choice of two different "Split Views."

- 1 Press the SETTING button. -
- 2 Highlight Navigation, then press ENTER.
- 3 Highlight Map View, then press ENTER.
- 4 Highlight your preferred Map View.
- 5 Press ENTER to choose ON. The indicator light will illuminate when your Map View of choice is selected.
- 6 Press the MAP button to return to the Map screen.

Voice Command:

- 1 Press the 🗤 🕻 button on the steering wheel. Voice Recognition will respond "Please say command."
- 2 After the tone, say "Birdview™ Map" or "Plan View Map."

Where Am I?

- 1 Press the INFO button. -
- 2 Highlight Where am I?, then press ENTER. The names of the next, current, and previous street will display.

Store Current Location in Address Book

You can store the current physical location of your vehicle in your Address Book.

- 1 While the Map screen is displayed, press ENTER.
- 2 Highlight Store Location, then press ENTER. The current location will be stored.



SETTING

INFO

SETTING

navigation

DEST

PROGRAMMING A DESTINATION

There are several methods you can use to program your Navigation System to guide you to a desired destination point. Shown on pages 36 and 37 are three of the most common destination programming methods.

Refer to section 4 in your Navigation Owner's Manual for additional methods available.

Note: The vehicle must be stationary before performing some destination programming.

Programming a Destination - Street Address

- 1 Press the DEST button. —
- 2 Highlight Street Address, then press ENTER.
- 3 Input the House Number by highlighting each character and pressing ENTER.
- 4 Once complete, highlight **OK** and press ENTER.
- Input the Street Name by highlighting each character and pressing ENTER.
 To insert a space, highlight and press ENTER.
- 6 Once complete, highlight **OK** and press ENTER.
- 7 Highlight the correct street and city from the list, then press ENTER.
- 8 Highlight **OK**, then press ENTER to set the destination and calculate the route.
- 9 Highlight **Start**, then press ENTER to begin route guidance.

Note: More Routes, Route Info, and Add Way Pt. are options available in addition to Start. Refer to your Navigation Owner's Manual for details.

Voice Command:

- 1 Press the 🗤 🅻 button on the steering wheel. Voice Recognition will respond "Please say command."
- 2 After the tone, say "Destination Street Address."
- **3** Follow the verbal prompts to provide additional information required to complete the procedure.

Note: If you are looking for a destination in the same State or City of your previous Navigation search, you may say "Destination Street Address, Last State" or "Destination Street Address, Last City" to skip forward.

Programming a Destination - Points of Interest (POI)

1 Press the DEST button. -

2 Highlight **Points of Interest**, then press ENTER.

3 Highlight a main category* (i.e. Restaurant, Shopping, Travel, etc.), then press ENTER.

Note: Depending on the main category you highlight, you may have the option to make additional subcategory selections.

Subcategory Selection Examples:

- Highlighting Restaurant allows you the additional option to highlight a specific cuisine choice, such as Italian or Chinese.
- Highlighting Travel allows you the additional option to highlight Airport, Automobile Club, etc. If Hotel is highlighted, another list of specific hotel chain names is provided from which you can choose.

633

DEST

DEST

For a comprehensive Category List, refer to section 4 (Setting a Destination) in your Navigation Owner's Manual.

- 4 Highlight Nearby POI, then press ENTER.
- 5 Highlight the desired selection from the list, then press ENTER.
- 6 Highlight **OK**, then press ENTER.
- 7 Highlight Start, then press ENTER.

Note: More Routes, Route Info., and Add Way Pt. are options available in addition to Start. Refer to your Navigation Owner's Manual for details.

*In this step you can also search for Points of Interest by Name. Refer to your Navigation Owner's Manual for more information.

Programming a Destination - Nearby Places

- 1 Press the DEST button. -----
- 2 Highlight Others, then press ENTER.
- 3 Highlight Nearby Places, then press ENTER.
- 4 Highlight a category (i.e. Restaurant, Gas Station, Hotel, etc.), then press ENTER.

Note: Depending on the category, you may be prompted to make additional selections.

5 Highlight the desired selection from the list, then press ENTER.

Voice Command:

- 1 Press the 🖏 🕻 button on the steering wheel. Voice Recognition will respond "Please say command."
- 2 After the tone, say "Destination Nearby Places."
- **3** Follow the verbal prompts to provide additional information required to complete the procedure.




convenience

ADVANCED REAR VIEW MONITOR

Refer to section 4 in your Owner's Manual for complete instructions on operation of the Rear View Monitor.

When the transmission is in **REVERSE**, the display screen will automatically change to view the area behind the vehicle.

> Predicted Course Line ·

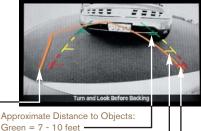

Green = 7 - 10 feet -Yellow = 3 feet -Red = 1.5 feet -

12-VOLT POWER OUTLET Refer to section 2 in your Owner's Manual

For Vehicles with BOSE[®] 5.1 Studio Surround[™] Premium Audio or Mobile Entertainment System.

 
For Vehicles without BOSE_® 5.1 Studio Surround[™] Premium Audio and Mobile Entertainment System.

VEHICLE INFORMATION DISPLAY Refer to section 4 in your Owner's Manual.

Press the INFO button to access the following vehicle information: -








TIRE PRESSURE

Choosing this menu item lets you conveniently view tire pressure in Pounds per Square Inch (PSI) for each tire. If a tire has low pressure, low pressure information will be shown on the display screen.



 You can then stop the vehicle, verify the pressure of the indicated low tire using a tire pressure gauge, and inflate the tire to the recommended Cold Tire Inflation Pressure.



All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. Infiniti Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your Infiniti dealer. All specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the Infiniti logo, and INFINITI model names are Nissan trademarks.



© 2004 INFINITI Division of Nissan North America, Inc. Printing, March 2005 Reorder # QR6E-0Y50U1, CG